

## Yükleme, İndirme & Depolama Uyarıları

### Loading and Offloading Recommendations - Yüklem ve İndirme

Site deliveries should preferably only be made where suitable mechanical handling equipment is available on site.




The delivered material must be treated with care. Lifting must only be carried out from the sides and the forklift truck tines must pass below a complete bundle. Tines must never\* be inserted into the end of the bundle, unless provision is made such as special packaging and/or extended tines, otherwise the safety limits of the lifting vehicle may be exceeded and damage may be caused to the equipment being lifted. For offloading by crane suitable lifting beams should be inserted from side to side beneath a bundle and these must be sufficiently long to avoid undue pressure on the edges of the bottom components.

The tensioned banding used for securing bundles of equipment during transport is not suitable for lifting purposes. When cutting this banding appropriate eye protection must be worn to avoid injury. Sheared steel (particularly pre-galvanized or stainless steel) does have relatively sharp edges and protective gloves must be worn during handling.

### Storage - Depolama

Warehousing of products in roofed and aired premises. Keep away from water! For protection of uncovered places damaged at assembly spray zinc paint is recommended.

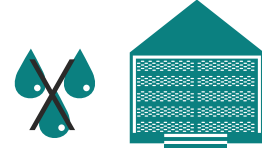


**Ürünler tercihen üstü kapalı ve kuru ortamda depolanmalı, nemli ve ıslak şartlardan uzak tutulmalıdır.**

### Storage Corrosion - Depolama Korozyonu

Wet storage stain (White Rust) is caused by the entrapment of moisture between surfaces of closely packed and poorly ventilated material for an extended period. Wet storage stain is usually superficial, having no affect on the properties of the metal.

Light staining normally disappears with weathering. Medium to heavy build up should be removed in order to allow the formation of normal protective film. Proper handling and storage will help to assure stain-free material. If product arrives wet, it should be unpacked and dried before storage. Dry material should be stored in a well ventilated low moisture" environment to avoid condensation formation.

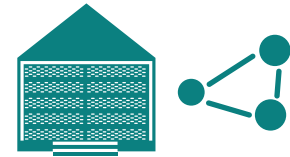

Outdoor storage is undesirable, and should be avoided whenever possible.

**Islak depolama lekesi (beyaz pas), kötü havalandırılan ve bitişik paketlenen metallerin yüzeylerinde oluşur. Beyaz pas yüzeysel olduğu için malzemenin karakteristiğini etkilemez. Küçük lekeler havalandırınca geçer. Malzeme ıslak ise paketlenmemeli ve kuruması için bekletilmelidir. Kuru ürünler iyi havalandırılmış ve az nemli ortamlarda saklanmalıdır. Dış ortamda depolama tercih edilmemelidir.**

**Ürünlerin açık alanda depolanması önerilmemektedir.**